


A range of electrically conductive tapes manufactured from copper or aluminium complete with conductive adhesive.

P&P Technology are always happy to provide guidance on the best product for your application.

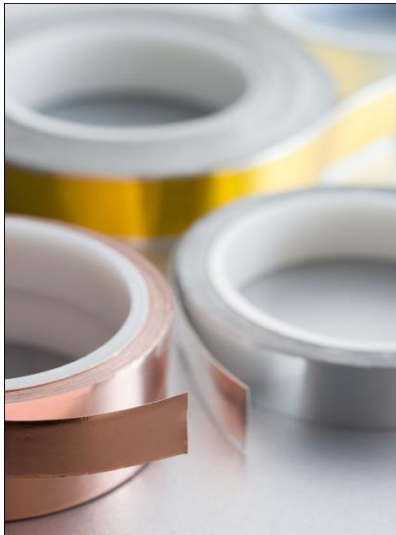

TF Shielding - Conductive tape

Advantages -

Very low cost solution

Easily applied

Can be supplied die-cut if required

Choice of materials

'Bake & Peel' versions available with a removable mask for use when enclosures are painted

Choice of three widths - 13mm, 25mm or 50mm

Applications -

Sealing joints in electronic enclosures

Providing a conductive mating surface on painted enclosures

Providing ground termination between panels in shielded rooms

Points to Note -

Must be replaced each time equipment is opened

